

INSTRUCTIONS FOR CHANGING TERAFLOAT DISCS AND BURRS

TOOLS & PARTS NEEDED

Blocking wrench, stainless steel with two pins

Red gear locking tool

New burrs or disk



PREPARATION

CLEAN HEAD FIRST

Then unscrew the sleeve and remove head




STEP 1

Carefully screw the red gear blocking tool onto the head (do not tighten)



STEP 2a (guarded head)

1. Rotate red tool to turn disc until blocking holes are aligned (arrow)

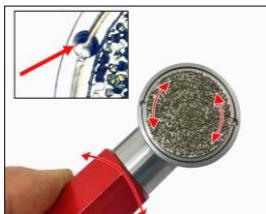

STEP 2b (guarded head)

2. Place the pins of the blocking wrench into the two holes. Hold down firmly



STEP 2c (guarded head)

3. Hold the blocking wrench
Unscrew red locking tool to loosen disc



STEP 3 (unguarded head)

- Place blocking wrench on top of the burr and unscrew the burr



STEP 4

- Screw on new burr or disc.
Then place head back on to the shaft.
Make sure, all threads are clean



STEP 5

- Screw the sleeve to the head. Make sure the connection is absolutely tight

